

## CHIRP - Bug # 6261

<b>Status:</b>	Feedback	<b>Priority:</b>	Normal
<b>Author:</b>	Jace Ford	<b>Category:</b>	
<b>Created:</b>	11/27/2018	<b>Assignee:</b>	
<b>Updated:</b>	05/11/2020	<b>Due date:</b>	
<b>Chirp Version:</b>	daily		
<b>Model affected:</b>	Baofeng UV-82HP		
<b>Platform:</b>	All		
<b>Subject:</b>	UV-82HP Advanced Settings not transferring		
<b>Description</b>			
<p>When programming my new UV-82HP all of the channels are being transferred, but alot of the settings are not being transferred. I cannot find after programming, a way to switch between vfo/mr modes, the single ptt function is not working, none of my power settings on each channel are set to high even though all of those check boxes and/or drop down menus are set to make these changes happen. Any ideas?</p>			

### History

#### #1 - 05/11/2020 09:55 pm - Bernhard Hailer

- Status changed from New to Feedback
- Target version set to chirp-daily
- Model affected changed from uv82hp to Baofeng UV-82HP
- Platform changed from Windows to All

Have you tried with a recent version? There might have been some additions since you submitted.